



4F-1, 236, Fu-Te 2nd Rd., His Chin,

Taipei Hsien, 221, Taiwan

TEL: 886-2-6616-6692 · 2694-6687

FAX: 886-2-2694-6875 · 2694-5097

Mainboard Changing Process

RX/RX II



Revision History :

Version	Date	Page	CONTENTS
1.0	May 24, 2014		First release
2.0	Sept. 16, 2015		Add RX II


Tools Required:

- Phillips screwdriver

1. Turn off machine and un-plug AC cable
2. Remove the right side cover by loose 3 screws at front and back.



3. Unplug all cable on main board.

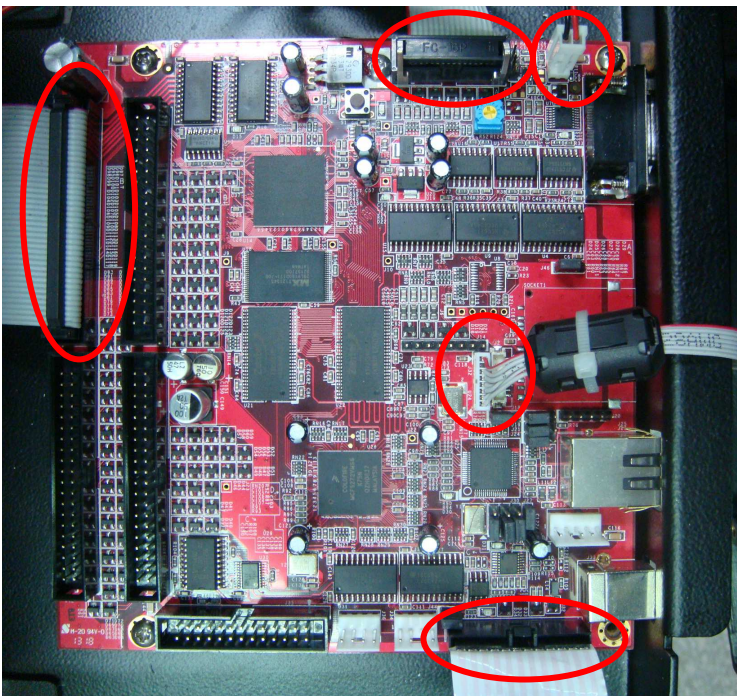

4. Use Phillips screwdriver to lose 4 screws on main board, change Main board.

